

## Assembly Instruction Sheet #IS-QPP3402BN For Style QPP3402BN

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (1) A19 Medium Base Bulb 100W Maximum or (1) Medium Base Vintage Bulb is recommended but not supplied. Estimated Assembly Time: 30-45 minutes Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. A Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Package Contents STEP 2 - Installing the Crossbar Assembly A. Pass the supply wires from outlet box through the Crossbar = Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (A) with Outlet Box Screws (not included). Tighten until snug. Crossbar Assembly А **Outlet Box** x 1 Fixture Body В x 1 A **Outlet Box Screws** Supply Wires with (not included) Ground Wire Figure 2 STEP 3 - Test Fitting Ceiling Canopy to Crossbar Assembly Clasp A. Remove mounting balls from the Crossbar Assembly (A). Fit the ceiling canopy and Fixture Body (D) to the Crossbar Assembly (A) and secure with mounting balls. Note: The ceiling canopy should Ceiling be snug against the ceiling and the mounting balls. If not, adjust Canopy the length of the nipple on the Crossbar Assembly (A) by Hex Nut unscrewing the preassembled hex nut and lock washer and then Coupling Set Screw screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the ceiling canopy and Fixture Body (D) is secure, remove the mounting ball and Fixture Body (D) Figure 1 Cord and proceed to Step 4. STEP 1 - Adjust Fixture Height Hex Nut and Mounting Screw Lock Washer A. Unscrew the set screw on the coupling underside of the ceiling canopy. Adjust the Ceiling Canopy cord length in or out of the ceiling canopy D according to your desired hanging height. Mounting Ball Γ Once your desired hanging height is achieved, tight the set screw on the coupling until snug. B. Move the clasp close to the hex nut inside of the ceiling canopy. Figure 3 Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com Released Date: 2017-08-10 © 2017 Quoizel Inc.

