QUOIZEL. Artisans in Lighting...since 1930


Installation Guide #IS-QPP4019C For Style QPP4019C

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (1)A19 Medium Base Bulb 100W Maximum, Medium Base Vintage Bulb is recommended, bulb not included. Fixture Hanging Height: Minimum Hanging Height is 13.75", Maximum Hanging Height is 51.25". Estimated Assembly Time: 30-45 minutes Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase. Note: This CONVERTIBLE fixture can be mounted as mini-pendant light or semi-flush light. Refer to respective installation steps for installations.	
A Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.	
These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.	
Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.	
D Ceiling Canopy x 1	
STEP 3A - Installing the Crossbar Assembly Outlet Box	
A. Pass the supply wires from outlet box through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure the Crossbar Assembly (A) with Outlet Box Screws (not included). Tighten until snug.	
Figure 3A	
STEP 4A - Test Fitting Ceiling Canopy to Crossbar Assembly A. Remove mounting balls from the Crossbar Assembly (A). Fit the Ceiling Canopy (D) to the Crossbar Assembly (A) and secure with mounting balls. Note: The Ceiling Canopy (D) should be snug against the ceiling and the mounting balls. If not, adjust the length of the nipple on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (D) is secure, remove the mounting ball and Ceiling Canopy (D). Mounting Screw A Hex Nut and Lock Washer Figure 4A	

©2018 Quoizel Inc.

visit us on-line at www.quoizel.com

Released Date: 2018-09-03

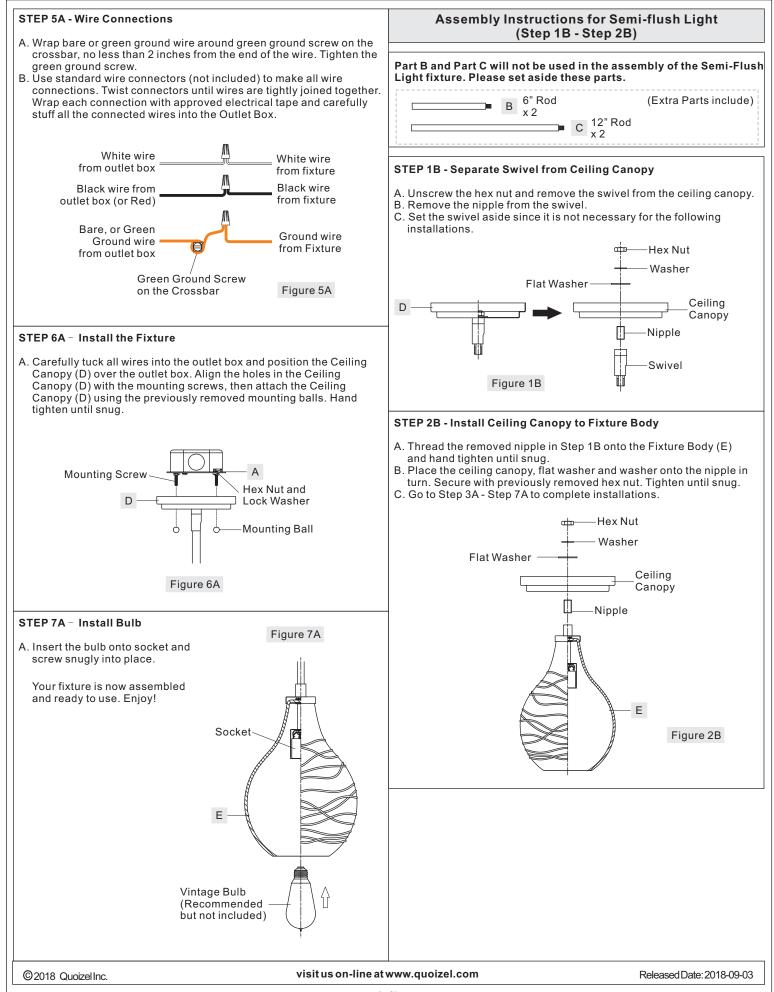

2of3

