

s Required: Plathead screwither, Philips screwither, plans, wire culturs, wire strippers, electrical laps, estaly glasses. Sourner: (3) ET2 Cardelabra Base Buths 60W Maximum(Not Indude). Adecembly Plans: 16-50 minutes amilion: Identify and Import all parts before beginning installation. Check package content list and diagrams below to be sure all parts are and for your are mineting or damaged, do not attempt to assemble, Install, or operate the Sours. Contact customer service for replacement


Warnings and Cautions


These hetructions are provided for your safety. It is very important you reed them completely before installing the tidure. We strongly recommend that a licensed, professional electrician perform the installation. 'um off electricity at circuit breaker or main fuse box before installation. Consult a libensed electrician if in doubt.

Disconnect foture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before

Package Contents

A Fixture Body x1

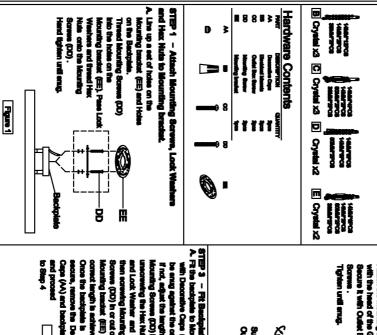

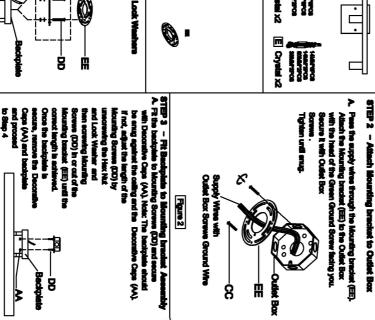

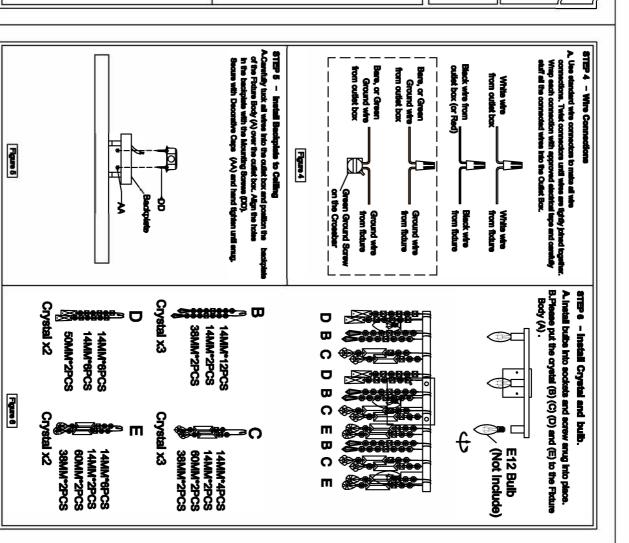


Figure 3