

Assembly Instruction Sheet #IS-6601C12-4-S r Style 6601C12-4-S

Required: Flathead screwdriver, Phillips screwdriver, wire cutters, wire strippers, electrical tape, safety glasses.
 Source: (4) GU10 35W
 Estimated Assembly Time: 20-30 minutes
 Precaution: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement.

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

DESCRIPTION	QUANTITY
Fixture Body	1pc
Crystal x1	1pc
Crystal x8	8pcs
Crystal x16	16pcs
Cap nut	4pcs
Wire nut	3pcs
Outlet Box Screw	2pcs
Mounting Screw	4pcs
Mounting bracket	1pc

1 - Attach Mounting Screws, Lock Washers

Hex Nuts to Mounting bracket.

1. Turn up a set of holes on the mounting bracket (EE) and Holes on the ceiling canopy. Pass Lock Washers and thread Hex Screws (DD) onto the Mounting Screws (DD) and tighten until snug.

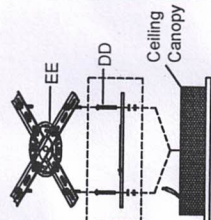


Figure 1

STEP 2 - Attach Mounting bracket to Outlet Box

A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw Screws (CC). Tighten until snug.

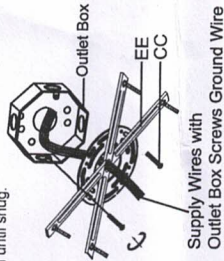


Figure 2

STEP 3 - Fit Ceiling Canopy to Mounting bracket Assembly

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Cap nut (AA). Note: The ceiling canopy should be snug against the ceiling and the Cap nut (AA). If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Mounting bracket (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Cap nut (AA) and ceiling canopy and proceed to Step 4.

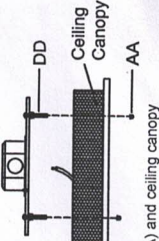


Figure 3

STEP 4 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

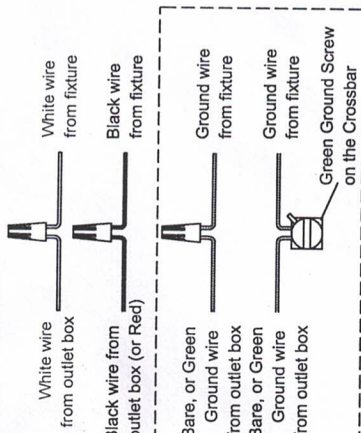


Figure 4

STEP 5 - Install Ceiling Canopy to Ceiling

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the holes in the ceiling canopy with the Mounting Screws (DD). Secure with Mounting Balls (AA) and hand tighten until snug.


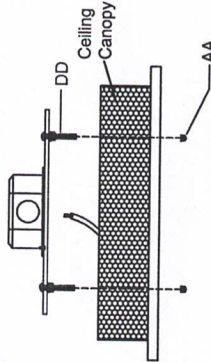


Figure 5

STEP 6 - Install Crystal and Bulbs.

A. Install bulbs onto sockets and push snug into place.
 B. Please put the crystal (1) (2) (3) (4) to the Fixture Body (A).

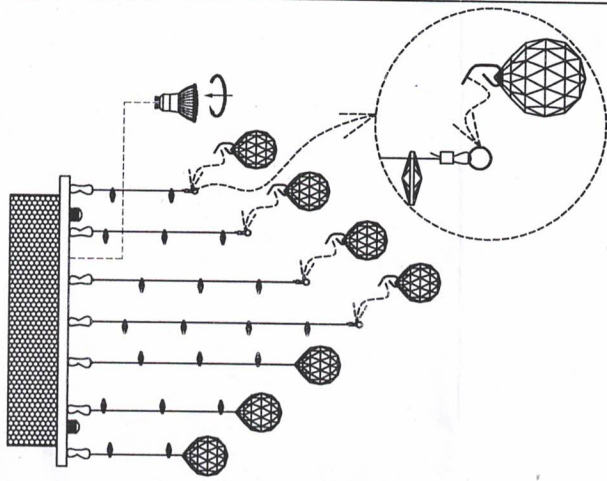

ø40mm*1
49PCS

Figure 6