

# Assembly Instruction Sheet #IS-8003C14C For Style 8003C14C


**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** (4) E12 60W Maximum (Not Included).  
**Estimated Assembly Time:** 10-20 minutes  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

**Warnings and Cautions**  
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

## Package Contents

- 32mm<sup>r</sup>-1PCS
- 63mm<sup>r</sup>-1PCS
- 16mm<sup>r</sup>-1PCS
- 14mm<sup>r</sup>-1PCS
- 12mm<sup>r</sup>-1PCS
- 1 Crystal x28
- 1 Nibble x1
- 1 Bobèche x1
- 1 40mm x1
- 2 Crystal x1

Hardware Contents		
PART	DESCRIPTION	QUANTITY
BB	Wire nut	2pcs
CC	Outlet Box Screw	2pcs



## STEP 1 - Release Mounting bracket from Ceiling Canopy.

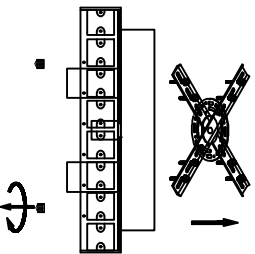


Figure 1

**STEP 2 - Attach Crossbar to Outlet Box.**  
 Align the supply wires through the Mounting bracket (EE). Attach the mounting bracket (EE) to the Outlet Box (CC) with the head of the Green Ground Screw (not included). Secure it with Outlet Box Screws (not included). Tighten until snug.

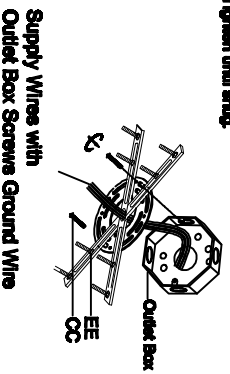


Figure 2

Supply Wires with Outlet Box Screws Ground Wire

## STEP 3 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors and wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

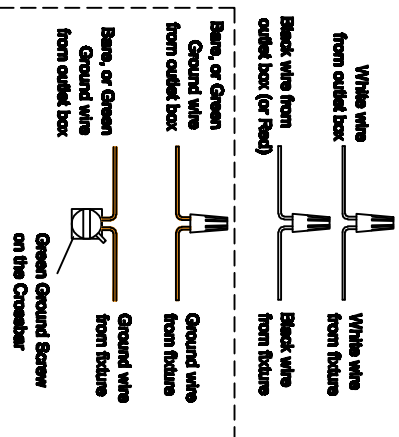


Figure 3

## STEP 4 - Install Ceiling Canopy to Ceiling

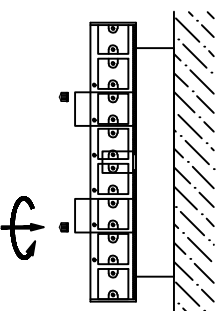


Figure 4

## STEP 5 - Install Bobèche

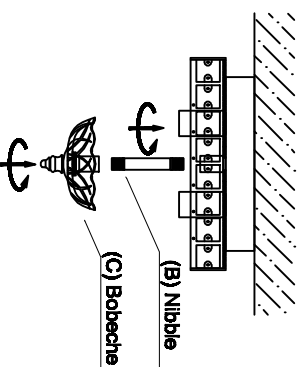


Figure 5

## STEP 6 - Install bulbs and Crystals

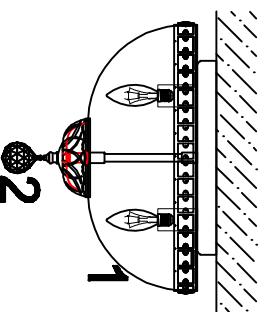


Figure 6

- 32mm<sup>r</sup>-1PCS
- 63mm<sup>r</sup>-1PCS
- 16mm<sup>r</sup>-1PCS
- 14mm<sup>r</sup>-1PCS
- 12mm<sup>r</sup>-1PCS
- 1 Crystal x28
- 1 40mm x1
- 2 Crystal x1