

) Required: Flathead screwisher, Phillips screwisher, plient, who culture, who drippen, decistral tape, satisty glasses. Screwer: (19) E12 Cardelabra Base Blabe 60W Macimum. Mousses: (19) E12 Cardelabra Base Blabe 60W Macimum. Made Accessiby Time: 20-50 minutes mades: Marriby and Impact all parts before beginning Installation. Check pushage content led and diagrams below to be sure all parts are nt. If any parts are missing or demaged, do not attempt to assemble, Install, or operate the future. Cardela customer service for replacement.


A Warnings and Caudions


Tum off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the thiture.

We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect thiture from power source before replacing bulbs. Make sure bulbs are given sufficient time to occi before removal.

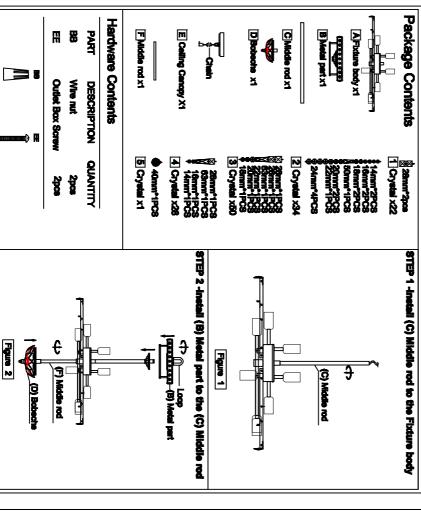

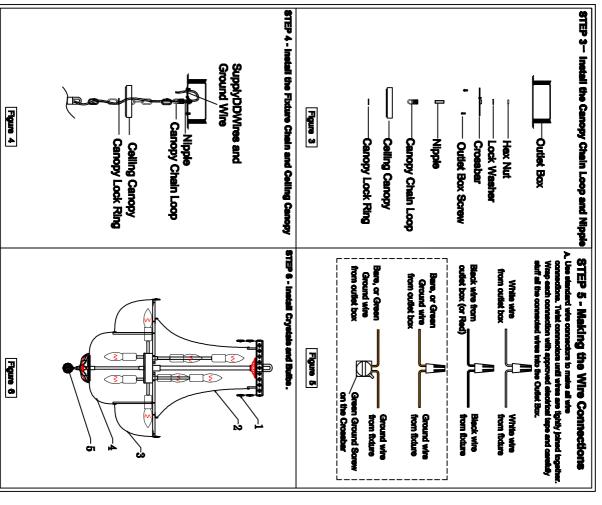

2 of 2