## C70803 INSTALLATION INSTRUCTIONS SHEET

## START FROM HERE

- Make sure power is completely off at the fuse box.Have your fixture installed by a qualified licensed
- electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference. **Technical Support:**1-844-628-8368


## Please Note:

• All Matteo Lighting fixtures come with pre-wired module(s).

• Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

CE LUMINAIRE NE DOIT PAS ETRE MONTE SUR UNE BOITE DE SORTIE NI SUPPORTE PAR UNE TELLE BOITE

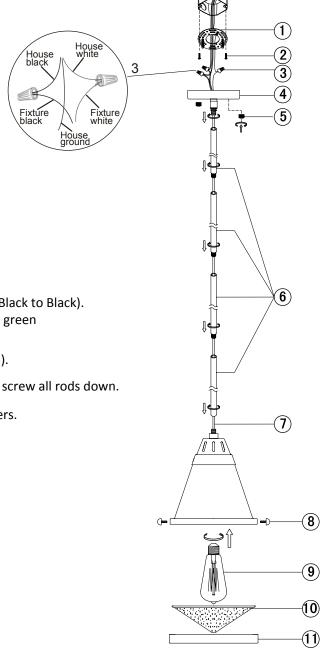

- Ensure main supply is switched off.
- Pit mounting bracket (1) onto mounting surface with self-tapping screws (2).
- Connect wires (3) according to color (White to White, Black to Black).
  Connect all earth plug together onto the crossbar with green screw to tight.
- If t ceiling plate (4) onto mounting bracket with nuts (5).
- S Make wire (7) across rods (6), canopy (4) in order, and screw all rods down.
- 6 Install the bulb (9) (not included) firmly into lampholders.
- Fit lamp shade (10, 11) into lampholders with nuts (8).
- 8 Reconnect power.

## WARNING:

This fitting must be earthed. Disconnect power and allow fitting to cool down before cleaning or changing the lamp.

